

IMPORTANT


Updated Programming

There are minor changes to the timer programming.
See the instruction sheet for details.

Method to remove unwanted events has changed.

The new instructions are:

1. Slide the “RUN” switch to “P”.
2. Press the “P” button until the event is showing.
3. Press and hold this button.
4. Press and hold the “P” button.

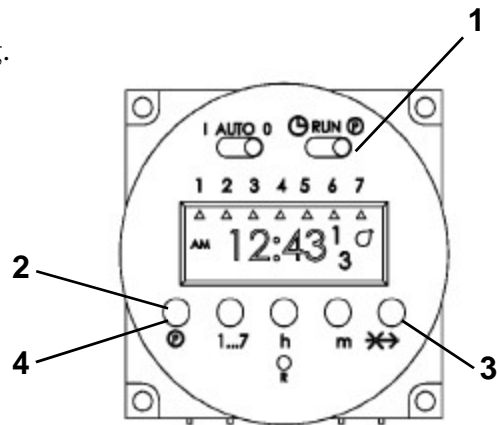

10090801

The event will clear in 3-4 seconds.

IMPORTANT


Updated Programming

There are minor changes to the timer programming.
See the instruction sheet for details.

Method to remove unwanted events has changed.

The new instructions are:

1. Slide the “RUN” switch to “P”.
2. Press the “P” button until the event is showing.
3. Press and hold this button.
4. Press and hold the “P” button.

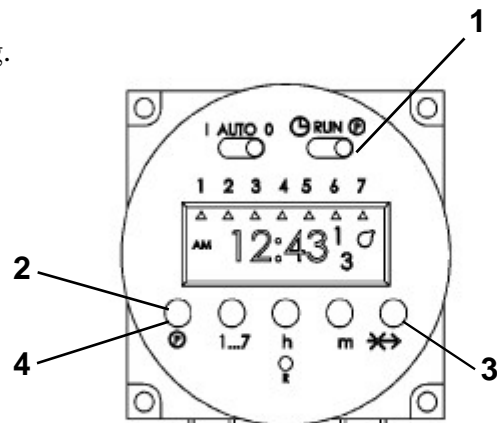

10090801

The event will clear in 3-4 seconds.