


**SuperDos 45 Quick Start Guide**

**0.25 - 45 gpm 5 – 100 psi\***

**57 - 10000 l/h 0,4 – 6,9 bar\***

**\*5% model has maximum operating pressure of 80 psi (5,5 bar)**

**\*\*\*NOTE\*\*\* Remote injection is NOT recommended for use with the 5% model**

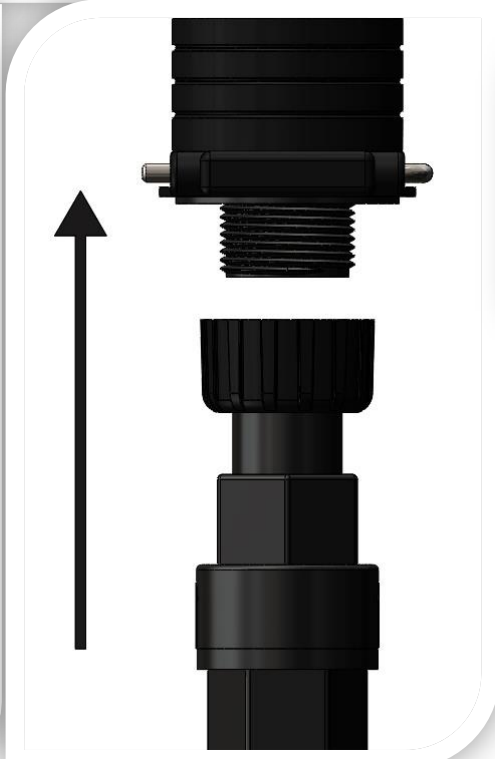


**SuperDos 45 Quick Start Guide**

**0.25 - 45 gpm 5 – 100 psi\***

**57 - 10000 l/h 0,4 – 6,9 bar\***

**\*5% model has maximum operating pressure of 80 psi (5,5 bar)**

**\*\*\*NOTE\*\*\* Remote injection is NOT recommended for use with the 5% model**

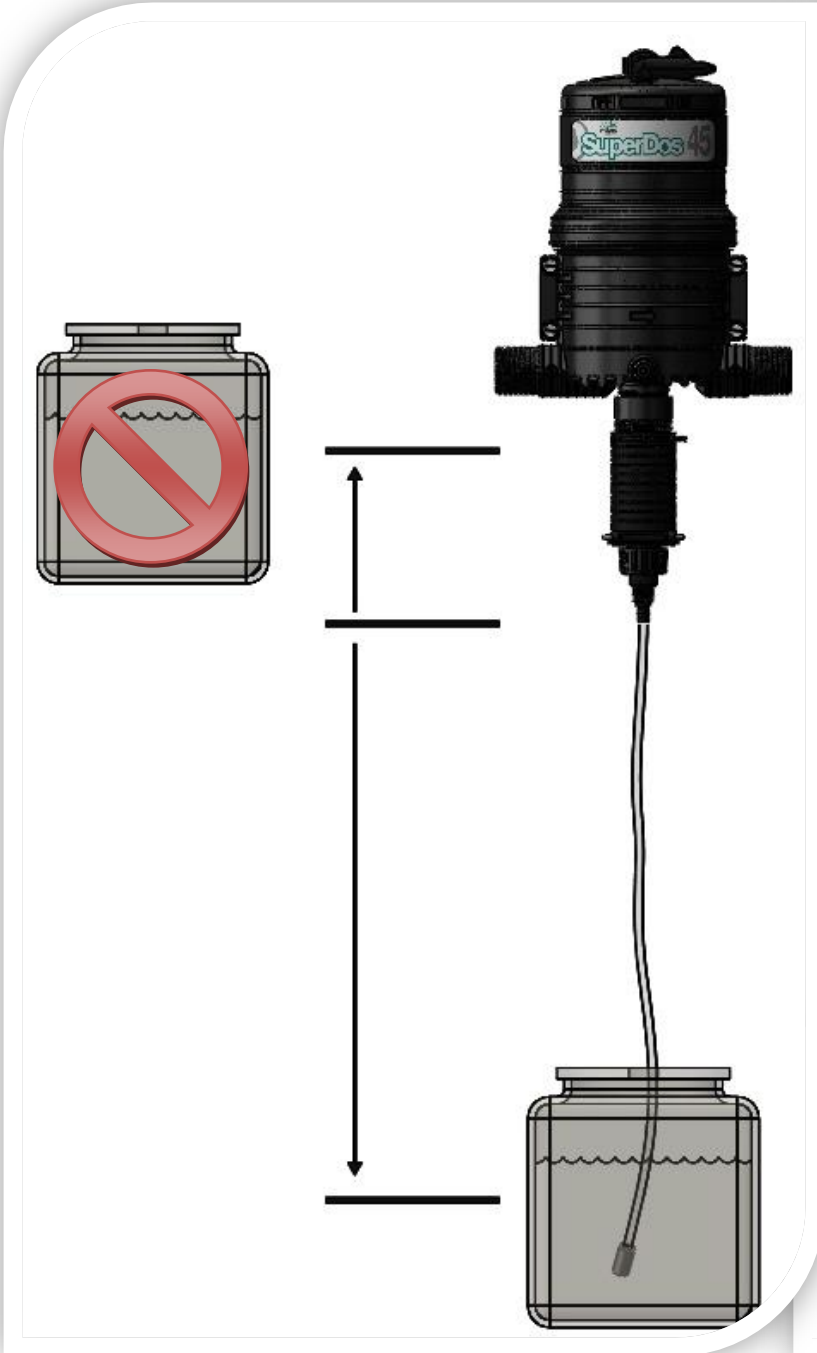

**SuperDos 45 Quick Start Guide**

**0.25 - 45 gpm 5 – 100 psi\***

**57 - 10000 l/h 0,4 – 6,9 bar\***

**\*5% model has maximum operating pressure of 80 psi (5,5 bar)**

**\*\*\*NOTE\*\*\* Remote injection is NOT recommended for use with the 5% model**



