

# Sprite III (Alpha) Warewash Dispensing System

## Reference Manual DM-700 Series



Online and downloadable Product Manuals and Quick Start Guides are available at [www.HydroSystemsCo.com](http://www.HydroSystemsCo.com). Please check online for the latest version of this Reference Manual.



### **WARNING:**

The DM-700 dispensing system is intended to be installed by experienced installers, in accordance with all applicable electrical and plumbing codes.

All dish machine and dispenser power must be disconnected during installation and/or any time the dispenser cabinet is opened.

**NOTE:** Always use proper lockout tagout procedures when servicing the dispenser.

---

## Preface

This manual has been written and illustrated to present the basic installation, operation and servicing instructions of the Sprite III Warewash Dispensing System. Guidelines will be suggested in reference to the preferred method of installation, however, the variety of equipment and the surrounding environment will dictate the actual installation of the Sprite III.

# Table of Contents

<b>1</b>	<b>Description of Features .....</b>	<b>4</b>
	Sprite III Operating System.....	5
<b>2</b>	<b>Mechanical Installation</b>	
	Wall Mount Dispenser.....	6
	Probe Installation .....	6
	Rinse Injection Fitting Installation .....	7
	Detergent Bulkhead Fitting Installation.....	7
	Rinse / Detergent Supply and Discharge Tube Installation.....	8
	Solenoid Water Feed Installation .....	8
	Third Product Pump Installation (Optional).....	9
<b>3</b>	<b>Electrical Installation</b>	
	Probe Wiring .....	9
	Electrical Connections .....	10
	Main Power Wiring - Single-Phase Power Systems .....	10
	Main Power Wiring - 3-Phase Power Systems .....	10
	Detergent Signal Wiring .....	11
	Rinse Signal Wiring .....	12
<b>4</b>	<b>Description of Controls</b>	
	Key Description.....	12
	NEXT Key .....	12
	SCROLL Key.....	12
	ENTER Key.....	12
<b>5</b>	<b>User Mode Operation</b>	
	User Mode Menus.....	13
	Rack Counter (Menu rAc) .....	14
	Detergent Prime (Menu dP) .....	14
	Rinse Prime (Menu rP) .....	14
	Third Product Prime (Menu 3P) .....	14
	De-Lime (Menu dL) .....	14
	ID Mode Screen .....	14
	Live Conductivity Display.....	14
	Password Access to Program Mode .....	14
	Manual Initial Charge Function (Probeless Mode ONLY) .....	14
	Rinse Saver Feature.....	14
	Display Indicators .....	15
	Low Detergent Alarm (Probe Mode ONLY) .....	15
	Detergent Overfeed Stop Alarm (Probe Mode ONLY).....	15
	Change Tank Wash Water Alarm.....	15
<b>6</b>	<b>Program Mode Operation</b>	
	Overview .....	16
	Password Access to Program Mode .....	16
	Program Mode Menus Diagram.....	16
	Configuration Settings (Menu CnF).....	17
	Detergent Control (Menu dct).....	17
	Machine Type (Menu).....	17
	Detergent Type (Menu d t) .....	18
	Pulse Feed – Capsule Detergent in Probe Mode ONLY (Menu PuL) .....	18
	Alarm Volume (Menu ALr) .....	18
	Rack Time in Rinse – Conveyor Machines ONLY (Menu rtr).....	18
	Rack Counter Reset (Menu rCr) .....	18-19
	Automatic Initial Charge – Probeless ONLY (Menu A t).....	19
	Edit Installer Password (Menu P h) .....	19
	Change Tank Wash Water Alarm (Menu CtA) .....	19
	Third Product Pump Selection (Menu 3rd).....	19
	Adjustments–Probe Mode (Menu AJ.P) .....	19
	Detergent Tank Reading (Menu dtr) .....	20
	Detergent SetPoint (Menu dSP) .....	20
	Enable User Live Conductivity Display (Menu Lcd).....	20
	Rinse Pump Speed (Menu rPS) .....	20-21
	Third Product Pump Speed (Menu 3PS).....	21
	Low Detergent Alarm Delay (Menu LdA) .....	21
	Rinse Feed Option (Menu rFo).....	21
	Rinse Delay Time (Menu rdt) .....	21
	Adjustments–Probeless Mode (Menu 4) .....	22
	Detergent Initial Charge (Menu 41) .....	22
	Detergent Dose (Menu 42) .....	22
	Detergent Dose Interval (Menu 43) .....	22
	Rinse Pump Speed (Menu 44.1) .....	22
	Third Product Pump Speed (Menu 44.2) .....	23
	Rinse Feed Option (Menu 45) .....	23
	Rinse Delay Time (Menu 46) .....	23
<b>7</b>	<b>Troubleshooting</b>	
	Alarms and Indicators.....	7
	Power Supply Input and Output .....	7
	Problems and Solutions List .....	7

# Table of Contents

<b>8</b>	<b>Maintenance and Service</b>	
	Overview .....	26
	Routine Maintenance .....	26
	Every Maintenance Visit .....	26
	Pump Tube Replacement .....	26
	Spare Parts Reference .....	27
<b>9</b>	<b>Specifications and Warranty</b>	
	Specifications .....	29
	Limited Warranty .....	29
	Limitation of Liability .....	29
	<b>Index</b>	

## Description of Features

### **Advanced Design**

The Sprite III uses miniaturized electronics to provide powerful features in a small package. A digital readout allows simple three-key programming of all options.

### **Reliability**

The gasket-enclosed Sprite III Warewash Dispenser is highly water resistant. The readout gives confirmation of detergent, rinse and third product feed.

### **Versatility**

The Sprite III can be configured as a conductivity probe controlled unit or as a probeless, time-based dispenser. It can accept a 100 VAC nominal to 240 VAC nominal (+/- 10% fluctuation) main power input at 50 or 60 Hz. Rinse and Detergent control signals are universal "machine interface" types that are capable of accepting any voltage from 24 to 240 VAC nominal (+/- 10% fluctuation) or 24V DC (+/- 20% fluctuation). Sprite III can control either powder (solid) or liquid detergents.

### **Cost Savings**

A special Rinse Saver feature prevents rinse additive waste during fills of the washer; digital electronics ensure accurate detergent control and minimize overuse.

### **Intelligence**

The Sprite III includes a rack counter as a "standard" feature. A unique "De-Lime" mode allows for safe washer cleaning without detergent waste.

### **Robustness**

A full range of programmable options are included, such as rinse delay, variable alarm volume, and manual prime for both rinse and detergent.

### **Audible and Visible Alarms**

In Probe Mode, alert the operator when the detergent is running low or when the wash tank water needs to be changed. Customize the parameters that cause these alarms to sound and display.

### **Easy Service/Repair**

The Sprite III features convenient front access for all servicing. No internal access to the cabinet is required for installation and routine maintenance. In the unlikely event that repairs are required, spare parts are available in modular form for fast and convenient service.



# Mechanical Installation

## Sprite III Operating System

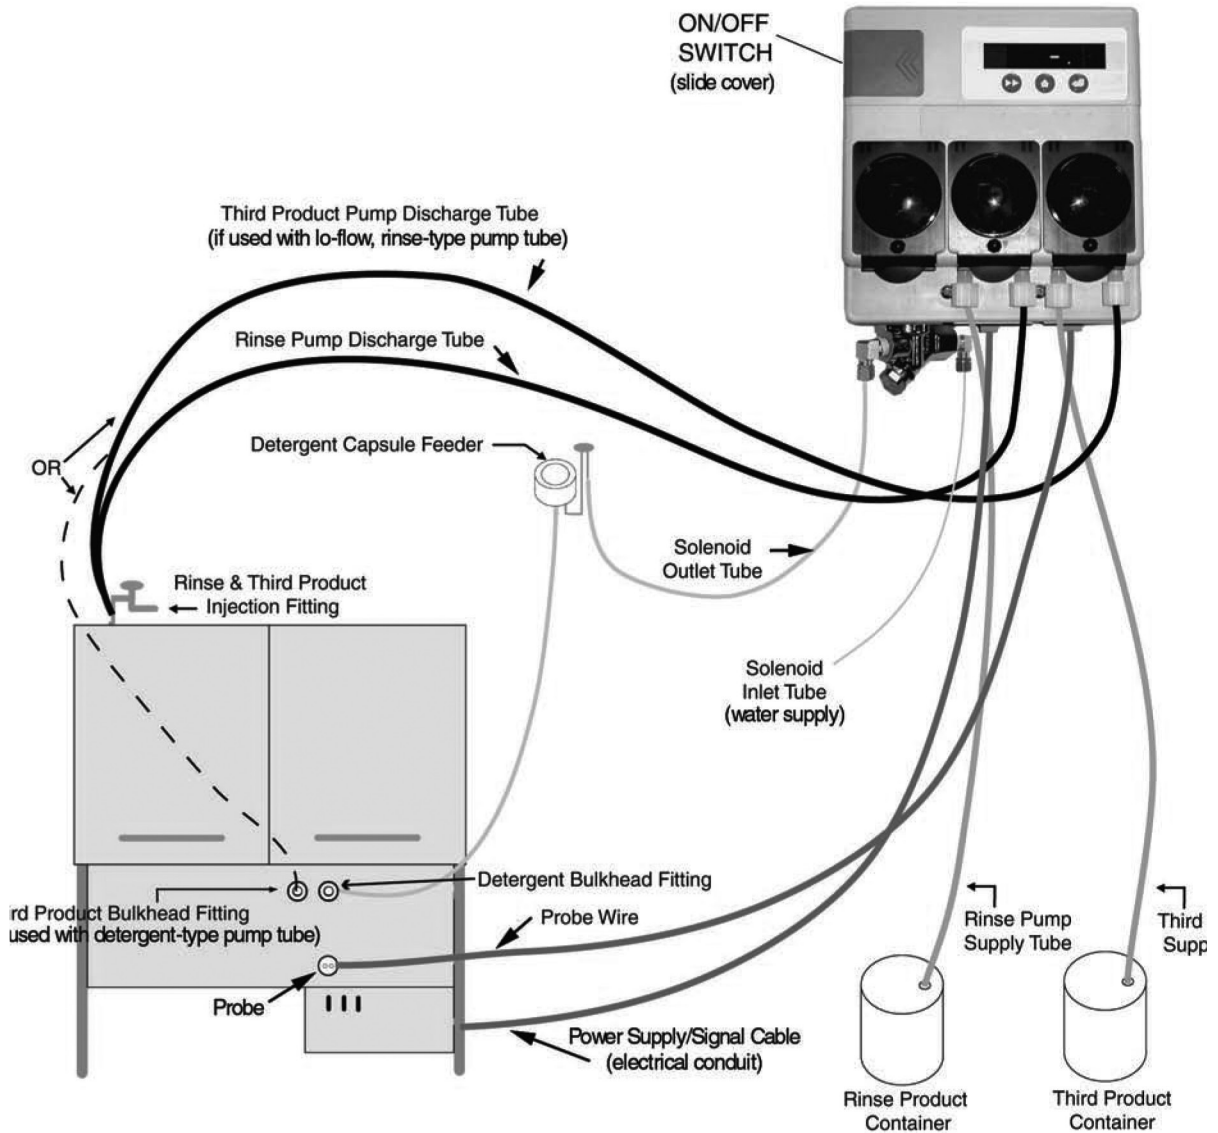


Figure 1 System Diagram and Connections

# Mechanical Installation

## Wall Mount Dispenser

Choose an installation location that is:

- Close to the product containers.
- At a reasonable height for easy maintenance access.
- Away from any direct sources of steam, water spray, and high temperatures.
- Close enough to dish machine electrical panel to allow dispenser wiring without using an external junction box (not provided), when possible.

Mount the Sprite III:

1. Drill one hole in wall for upper mounting bracket screw wall anchor.
2. Install wall anchor and temporarily attach bracket to the wall (do not fully tighten screw).
3. Level bracket using built-in level and mark drill locations for lower mounting screw holes.
4. Swing bracket out of the way, drill lower holes, install lower wall anchors.
5. Screw bracket in place and lower dispenser onto wall mount bracket. Press down until unit locks in place.
6. To remove dispenser from bracket, depress lock button on top of bracket as you lift the unit.

## Probe Installation

**NOTE:** For best results, install the new probe provided with this unit. Use of another manufacturer's probe will alter the conductivity measurements and setpoint readings.

The probe senses the detergent concentration. Correct probe placement is critical for accurate detergent concentration control. Always use the new probe provided with the dispenser.

Locate the probe so that it will be:

- Completely immersed in the wash tank solution, in an area that has a good flow of solution.
- Close to the product entry point.

Many dish machines have knockouts provided for probe installation and/or existing probes. Previously punched probe holes may be suitable, but always confirm that the probe will be immersed in the wash tank solution before installing. If probe hole is present, skip to Step 2.

1. Drill a 3/8" hole in the center of the probe location. Use a Greenlee (or similar) 7/8" hole punch to cut the final hole.
2. Remove the probe retaining nut.
3. From inside the dish machine tank wall, insert probe (with rubber gasket) into hole.
4. From outside the dish machine tank wall, install second rubber gasket, plastic washer and probe retaining nut. Tighten finger-tight, plus 1/4 turn, only.



### WARNING:

The Sprite III is intended to be installed by experienced installers in accordance with all applicable electrical and plumbing codes.

All dish machine and dispenser power must be disconnected during installation and/or any time the dispenser cabinet is opened.



Figure 2 Mounting Bracket

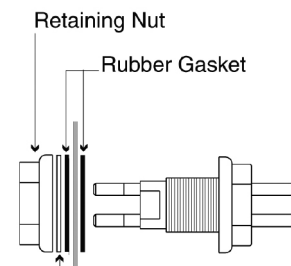


Figure 3 Probe Mounting

### CAUTION:

Do not over-tighten the retaining nut!

## Rinse Injection Fitting Installation

The injection fitting threads into 1/8" NPT female threads. If the dish machine rinse plumbing is thin wall pipe, use a saddle clamp with a 1/8" NPT threaded hole. If an optional pressure switch will be used, thread the injection fitting into one side of the pressure switch water source fitting pipe tee.

Install the rinse injection fitting in a location that is:

- At least 6" below the dish machine rinse plumbing vacuum breaker or solenoid valve (to conform to plumbing codes).
- On continuous rack, flight, or conveyor machines: be sure this location is downstream from any rinse makeup water.

The dish machine may already have a tapped hole present to accommodate the fitting; if this is the case, skip to Step 3.

1. Drill a 7/32" hole in the rinse plumbing injection location.
2. Tap the hole drilled in Step 1 with a 1/8" NPT tap.
3. Install the injection fitting. Use thread sealant to ensure a leak-free assembly.

## Detergent Bulkhead Fitting Installation

**NOTE:** If you are using a solid, powder, or slurry feed system, follow your system's instructions. Use the following section for liquid detergent applications.

Correct detergent bulkhead fitting placement is critical for accurate detergent concentration control (probe mode only). Choose a mounting location for the detergent bulkhead fitting that is:

- Above the water line in the tank
- Close to the probe location (when possible).
- Discharging detergent directly into the wash tank and not on top of any shelf areas or other obstacles that could prevent detergent from falling directly into the wash tank.

Previously punched holes may be suitable, but always confirm that the fitting is above the water line before installing.

If a hole is present, skip to Step 2.

1. Drill a 3/8" hole in the center of the detergent inlet location. Use a Greenlee (or similar) 7/8" hole punch to cut the final hole. Remove the detergent bulkhead fitting retaining nut.
2. From inside the dish machine, insert detergent bulkhead fitting (with rubber gasket) into hole.
3. From outside the machine, install second rubber gasket, plastic washer, and plastic retaining nut. Tighten finger-tight, plus 1/4 turn, only.

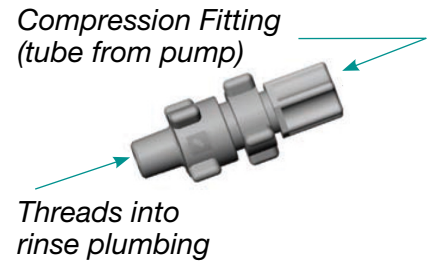


Figure 4 Rinse Injection Fitting

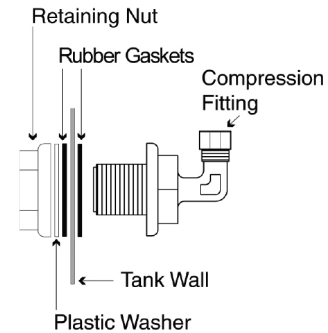


Figure 5 Detergent Bulkhead Fitting



**CAUTION:**  
Do not over-tighten the retaining nut!

# Mechanical Installation

## Rinse / Detergent Supply and Discharge Tube Installation

**NOTE:** Supply and discharge tubing is only included with the super kits.

1. Route pump supply tubes from supply containers to the inlet sides (left) of each respective pump. Slip the tube through the compression nut into fitting and tighten.
2. Route pump discharge tubes to the outlet sides (right) of each respective pump. Slip the tube through compression nut into fitting and tighten.
3. Route other end of rinse pump discharge tube to rinse injection fitting. Slip the tube through compression nut into fitting and tighten.
4. Route other end of detergent pump discharge tube to the detergent bulkhead fitting. Slip the tube through compression nut into fitting and tighten.

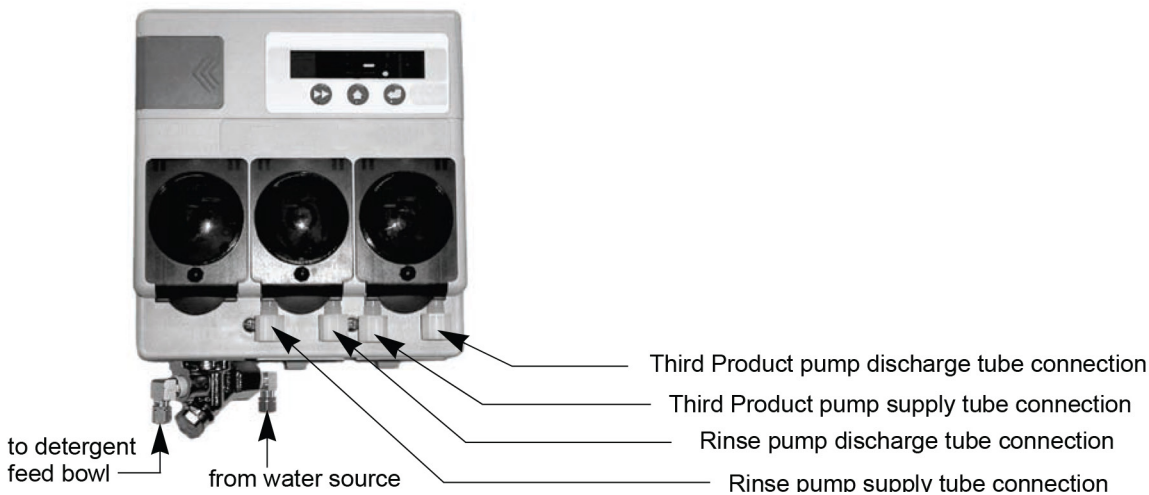


Figure 6 Sprite III Dispensing System

## Solenoid Water Feed Installation

**NOTE:** The following instructions are for Solenoid-equipped units only.

If you are using a solid, powder, or slurry type feed system you will need a water source for the dispenser solenoid valve. This water supply may be hot or cold, but for safety reasons should not come from the boosted temperature rinse water line on high temperature dish machines. The dispenser solenoid valve fittings are 1/4" (6 mm on metric units) compression.

Typically, a saddle clamp is used for the solenoid valve water source. If the plumbing is steel or brass, you can drill a 7/32" hole and tap for 1/8" NPT threads.

1. Install petcock valve to water source plumbing. Connect 1/4" copper or plastic tube to the valve.
2. Route tube to the dispenser solenoid valve. Slide tube into water inlet side compression fitting and tighten.
3. Connect another 1/4" tube to the outlet side of the dispenser solenoid valve and route to the water inlet connection for the feed system.
4. Confirm all compression fittings are tight.
5. Be sure to turn on water source valve prior to adjusting dispenser settings.



### CAUTION:

If the water source is hot, use only copper tubing. DO NOT use poly tubing. DO NOT connect solenoid to the boosted temperature rinse water line on high temperature dish machines.

## Mechanical Installation

### Third Product Pump Installation (Optional)

The third product pump will run with either the rinse pump (as a sanitizer pump) or the detergent pump (as a de-stainer pump), depending upon the Third Product Menu setting. Refer to “Third Product Pump Selection (Menu 3rd)” on page 23 and “Third Product Prime (Menu 3P)” on page 15 for configuration information.

#### Third Product as a Sanitizer

To use the Third Product Pump as a sanitizer with the rinse pump, use a plastic injection fitting and refer to the instructions for “Rinse Injection Fitting Installation” on page 7.

#### Third Product as a De-Stainer

To use the Third Product Pump as a de-stainer with the detergent pump, use a 1/4" bulkhead fitting and refer to the instructions for “Detergent Bulkhead Fitting Installation” on page 7.

#### Disable Third Product Pump

To disable the Third Product Pump, set the motor speed to zero in the Adjustment Menu for Probe Mode (see “Third Product Pump Speed (Menu 3PS)” on page 25) or Probeless Mode (see “Third Product Pump Speed (Menu 3PS)” on page 25).

## Electrical Installation

**IMPORTANT:** All high voltage wiring must be performed with the cable provided and must be enclosed in flexible conduit, seal-tite or other housing approved for damp locations. The Sprite III dispensing system is intended to be installed by experienced installers in accordance with all applicable electrical and plumbing codes. All dish machine and dispenser power is to be disconnected during installation and/or any time the dispenser cabinet is opened. Always verify all voltage sources with a meter.

Please note the following additional electrical information:

- All electrical connections (except the probe) must be in either the dish machine control circuit panel or an external junction box.
- The dispenser is pre-wired with a multi-conductor electrical cable that must be run through a conduit to the hard-wired connections on the dish machine.
- Use a 1/2" (13 mm) ID water tight conduit that meets all local and national codes. A conduit fitting is on the bottom of the dispenser, where the power cable exits.
- The probe wire is also pre-wired and should be routed to the probe location and cut to length if a probe is used.

### Probe Wiring

**NOTE:** To maintain the IP rating of the unit, watertight, flexible conduit should be used to route the probe wire. Failure to use watertight, flexible conduit will impair water resistance of the unit enclosure.

1. Route the probe wire to the probe location and cut to fit. If you need to extend the probe wire, use high quality, corrosion resistant or waterproof butt splices with a quality crimping tool.
2. Strip wire ends and crimp on the ring lugs provided.
3. Connect the ring lugs to the probe with nuts and split washers provided. Be sure that connections are tight and secure.

## Electrical Connections

Sprite III includes two separate wiring cables: The Main Power Cable (with Input Trigger Signal ) must be routed through a conduit fitting; the conductivity probe connection cable does not require a conduit. Sprite III can be connected to single-phase power systems or to many 3-phase power systems. Instructions for each type of power system follows. Use the type that applies to the power system at your site.

### Main Power Wiring – Single-Phase Power Systems

#### Connection Instructions for Single-Phase Power Systems

1. Power input to the Sprite III can be any voltage, from 100–240VAC nominal, 50Hz or 60Hz. The neutral source is connected to the Light Blue wire of the seven-wire harness.
2. The Hot source is connected to the Brown wire.
3. The Green/Yellow wire must be connected to Earth/Ground.

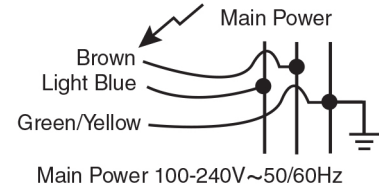


Figure 7 Single-Phase Power Wiring Diagram

### Main Power Wiring – 3-Phase Power Systems


The Sprite III can be connected to many common three-phase power systems, if all requirements outlined in “Requirements for 3-Phase Power Connections” (below) are met. After meeting these requirements, refer to the illustrations shown in Figure 8 “Connection Diagrams for 3-Phase Power Systems” below. Use the diagram that applies to the power system at your site.

#### Requirements for 3-Phase Power Connections


1. The Sprite III is a single-phase load. Line voltage is applied using just two wires (Brown and Blue). A separate safety ground is required and must be connected (Green/Yellow wire).
2. Avoid interconnection to power systems that are not ground-referenced.
3. Where several connection options exist, choose a connection between a line (phase) and neutral. Connect the Light Blue wire to the neutral line.
4. The nominal AC voltage (between Brown and Light Blue wires) MUST NOT exceed 240 volts.
5. The Green/Yellow wire is for interconnection to earth ground only. Do not connect line, phase or neutral wires to the Green/Yellow wire.
6. For operation from 220/380 and 240/415 power systems, a neutral connection MUST be available.

### Connection Diagrams for 3-Phase Power Systems


1. 120/208 VAC WYE  
includes Neutral and Ground

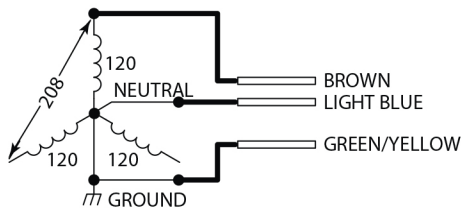

2. 120/240 VAC Delta  
with High Leg

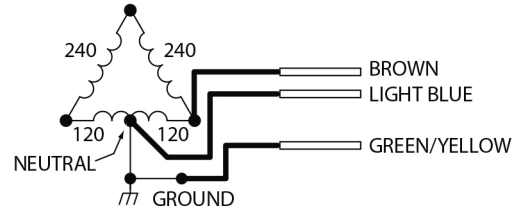

3. 220/380VAC or 240/415VAC WYE  
includes Neutral and Ground

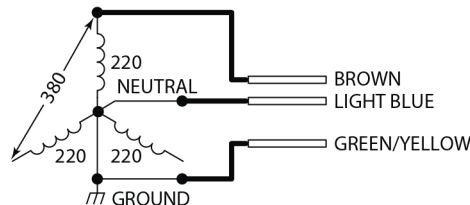

#### Note:

An accessible neutral is required. Connect between line and neutral ONLY.

Figure 8 Connection Diagrams for 3-Phase Power Systems



## Detergent Signal Wiring

The detergent signal input is an optically isolated signal input that draws no more than 20 mA. It is a universal DC voltage input that accepts any voltage between 24 and 240 VAC nominal (+/- 10% fluctuation), or 24 VDC nominal (+/- 20% fluctuation).

### Detergent Signal Wiring – Probe Mode

Typical wiring locations are dispenser detergent power source or the wash motor contacts in the dish machine control panel. This power source is on when the dishwasher is running the wash pump.

- Connect yellow (DC +) and white/yellow (DC -) colored wires to detergent power source.

### Detergent Signal Wiring – Probeless Mode

**On conveyor type dishwashers**, the detergent signal must occur only once per dish machine fill/drain occurrence—beginning when the dish machine fills. Typical wiring locations are an “on light”. Each time this power source comes on, and stays on for ten seconds, the dispenser will feed the detergent initial charge amount (with probeless and automatic initial charge modes set).

**On door-type dishwashers**, connect the detergent signal input to the dispenser detergent power source or the wash motor contacts in the dish machine control panel. This power source is on when the dishwasher is running the wash pump.

- Connect yellow (DC +) and white/yellow (DC -) colored wires to initial charge power source.

## Rinse Signal Wiring

The rinse signal input is an optically isolated signal input that draws no more than 20 mA. It is a universal DC voltage input that accepts any voltage between 24 and 240 VAC nominal (+/- 10% fluctuation), or 24 VDC nominal (+/- 20% fluctuation). Typical wiring locations are dispenser rinse power source or the rinse solenoid valve circuit in the dish machine control panel. This power source must be live whenever the dishwasher is rinsing. When no suitable rinse signal connection is available, an optional pressure switch may be used with a constant power source instead.

- Connect violet (DC +) and white/violet (DC -) colored wires to rinse (or constant power for pressure switch installations) power source.

### Probeless Mode

**NOTE:** Certain dishwasher designs require that the rinse aid be dispensed upon the detergent signal rather than the rinse signal. In this case, you must still connect the rinse signal input to either the fill solenoid or the rinse solenoid circuit of the dishwasher to enable automatic initial charge function in probeless mode.

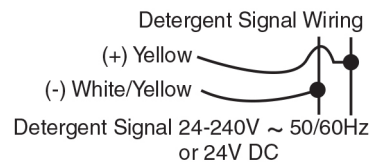


Figure 9 Detergent Signal Voltage

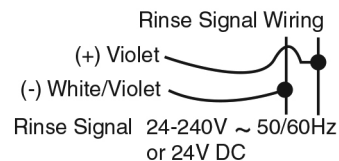


Figure 10 Rinse Signal Voltage

# Description of Controls

## Key Description

The Sprite III makes use of only 3 keys and a 3-digit LED display for all dispenser operation and programming. Use the menu screen illustrations as a guide when learning to program the Sprite III. Use the NEXT key to move to all available main menu screens in Program Mode.

### NEXT Key

Use the NEXT key to move to the next menu or task.

The tasks under the NEXT key are:

- User Mode - moves through User Mode menus.
- Program Mode - moves through the Program Mode menu screens.
- Input Screens - moves blinking digit to the right.

### SCROLL Key

Use the SCROLL key to change the blinking digit value. The tasks under the SCROLL key are:

- User Mode - Changes the values of blinking digits. Activates Probeless Manual Initial Detergent Charge. See “Password Access to Program Mode” on page 16.
- Program Mode - Changes value of blinking digits. Selects menu group.
- Input Screens - Changes value of blinking digits.

### ENTER Key

Use the ENTER key to save your setting or to perform a task. The tasks under the ENTER key are:

- User Mode - starts and stops rinse pump and detergent prime; Accesses Password input screen (press and hold for two seconds); Performs actions as prompted in User Mode menu screens.
- Program Mode - accesses all input screens from main menu loop screens. Exits program mode.
- Input Screens - sets the displayed value in all input screens (via Scroll key). Exits back to main menu loop.

## Guide to Icons

Throughout this manual, you will see icons that represent the Next, Scroll and Enter keys, as illustrated to the right.



Figure 11 Program Mode Key Descriptions

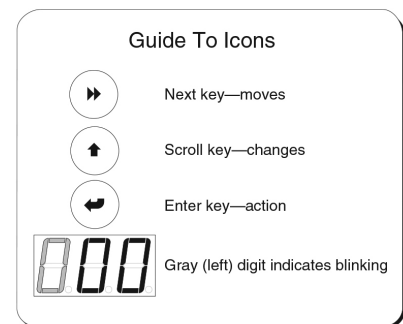


Figure 12 Guide to Icons



# Description of Controls

## Menu Acronyms and Meanings

Acronym	Menu Name	Acronym	Menu Name
Aic	Automatic Initial Charge	oFF	Off
AJ.n	Adjustment Menu-Probeless	on	On
AJ.P	Adjustment Menu-Probe	out	Exit Program Mode
ALr	Alarm Volume	Pin	Change Installer Password
cAP	Capsule Detergent Type	Prb	Probe Mode
con	Conveyer Machine Type	PuL	Pulse Feed
CnF	Configuration Settings Menu	rAc	Rack Counter
CtA	Change Tank Water Alarm	rCr	Rack Count Reset
dct	Detergent Control	rdt	Rinse Delay Time (Door Only)
ddi	Detergent Dose Interval	rFo	Rinse Feed Option
dEt	Detergent (3rd Product config.)	rin	Rinse (3rd Product config.)
dic	Detergent Initial Charge	rod	Rinse on Detergent
dor	Door Machine Type	ror	Rinse on Rinse
doS	Detergent Dose	fP	Rinse Prime
dL	De-Lime	rPS	Rinse Pump Speed
dP	Detergent Prime	rtr	Rack Time in Rinse
dSP	Detergent Setpoint	3 P	3rd Product Prime
dt	Detergent Type	3PS	Third Product Pump Speed
dtr	Detergent Tank Reading	3rd	Third Product Pump
Hi	High Alarm Volume	195	Pulse = 1 Sec. On, 9 Sec. Off, 50% of Setpoint
Lcd	Live Conductivity Display	197	Pulse = 1 Sec. On, 9 Sec. Off, 70% of Setpoint
Lda	Low Detergent Alarm Delay	265	Pulse = 2 Sec. On, 6 Sec. Off, 50% of Setpoint
L i P	Liquid Detergent Type	268	Pulse = 2 Sec. On, 6 Sec. Off, 80% of Setpoint
Lo	Low Alarm Volume	447	Pulse = 4 Sec. On, 4 Sec. Off, 70% of Setpoint
ME	Medium Alarm Volume	648	Pulse = 6 Sec. On, 4 Sec. Off, 80% of Setpoint
Mt	Machine Type	619	Pulse = 6 Sec. On, 1 Sec. Off, 90% of Setpoint
noP	Probeless Mode		

# User Mode Operation

## User Mode Menus

**NOTE:** Certain dishwasher designs require that the rinse aid be dispensed upon the detergent signal rather than the rinse signal. In this case, you must still connect the rinse signal input to either the fill solenoid or the rinse solenoid circuit of the dishwasher to enable automatic initial charge function in probeless mode.

Press NEXT to access and move through the User Mode menu loop. Screens are numeric only, without the text seen in the illustration. To exit from a menu, wait 30 seconds; the menu will automatically return to either the Home Screen or the Live Conductivity Display, if enabled.

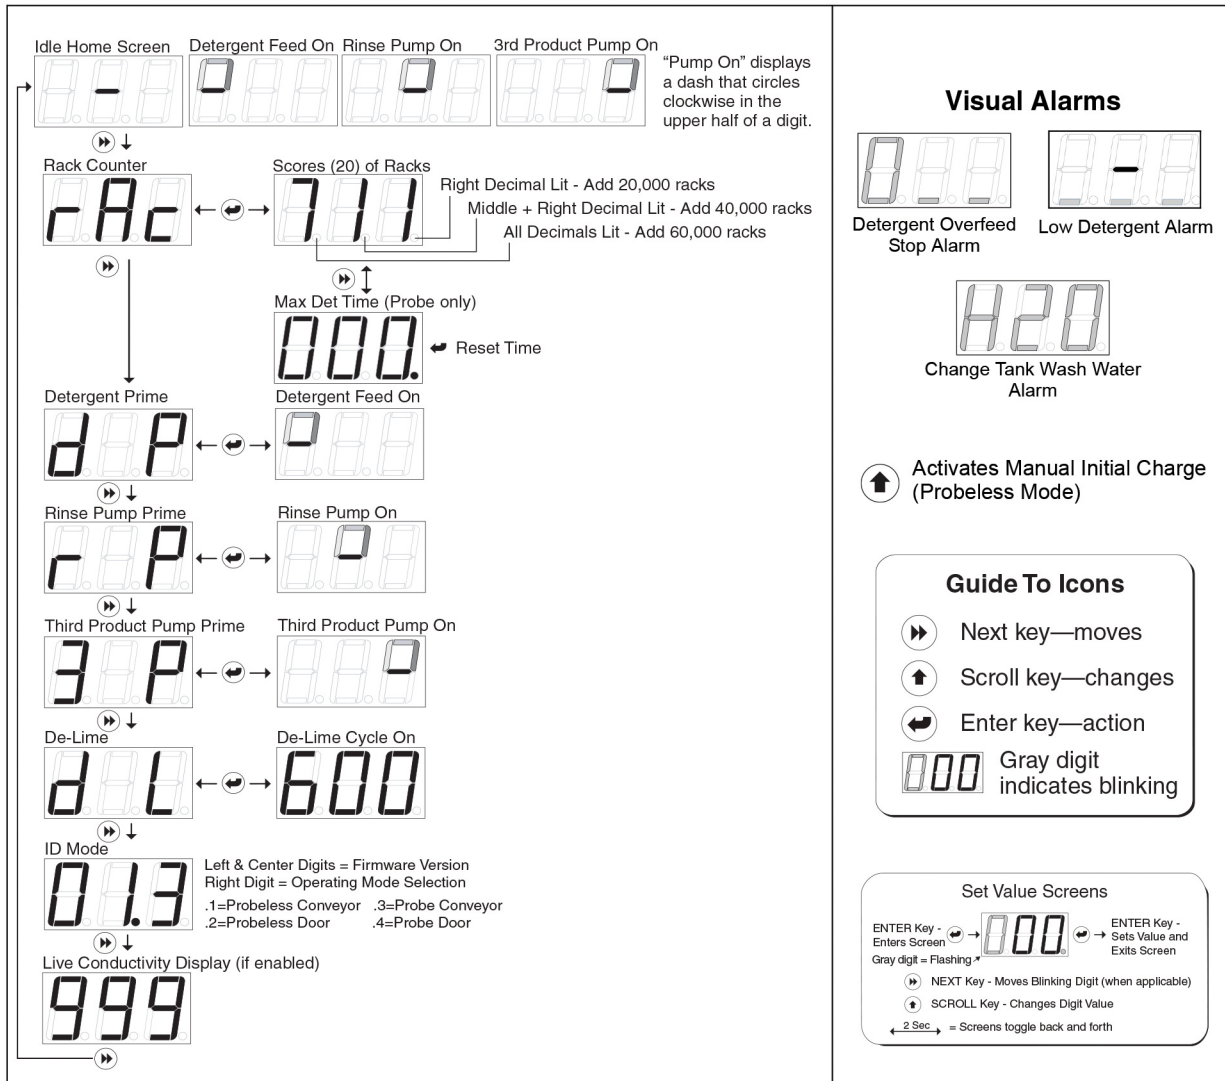


Figure 13 User Mode Menus

## Rack Counter (Menu rAc)

**NOTE:** On door-type dishwashers, a rack is counted each time the rinse signal is activated.

On conveyer-type dishwashers, a rack is counted based on the time set in Configuration Menu Rack Time in Rinse (rtr).

The rack counter keeps track of up to 79,980 racks run before it needs to be manually reset. Racks are counted by scores (sets of 20 racks). This means that a rack count display of 700 equals 14,000 racks run. When the maximum number (999) displays, the right decimal is lit. This indicates that approximately 20,000 racks have run and the display rolls over to 000. When 20 more racks have run, the display shows 001. The rack count is then 20 plus 20,000 = 20,020.

When another approximately 20,000 racks have run, the rack counter reaches 999 a second time and the middle and right decimal are lit. This indicates that approximately 40,000 racks have run and the display rolls over to 00.0. until it reaches 999 a third time and rolls over to 0.0.0. (all decimals are lit). This indicates that approximately 60,000 racks have run.

When the display reaches 9.9.8. and all decimals are lit, this indicates that approximately 79, 940 racks have run. No additional racks will be counted until the Rack Counter is reset (see “Rack Counter Reset (rCr)” on page 22.)

### To view the Rack Count (rAc) and/or Maximum Detergent Time:

1. Press NEXT to display the Rack Counter (rAc). Press ENTER to display racks washed.
2. In Probe Mode only, press NEXT to display “Max Det Time,” the longest time the detergent feed has to run to satisfy the setpoint. Make note of this time after a new installation.
3. Press NEXT to toggle back to rAc, then press ENTER to return to the main menu loop.

## Detergent Prime (Menu dP)

1. Press NEXT to display dP.
2. Press ENTER to start detergent feed.
3. Press ENTER again to stop detergent feed and return to the main menu loop. Prime automatically stops after 30 seconds.

## Rinse Prime (Menu rP)

1. Press NEXT to display rP.
2. Press ENTER to start (or stop) the selected pump. Prime automatically stops after 30 seconds.

## Third Product Prime (Menu 3P)

1. Press NEXT to display 3 P.
2. Press ENTER to start (or stop) the selected pump. Prime automatically stops after 30 seconds.

## De-Lime (Menu dL)

1. Press NEXT to display d L.
2. Press ENTER to start the De-Lime Cycle (10 minutes). During this time, all dispenser operation is stopped.
3. Press ENTER to stop the De-Lime Cycle early, and return to the main menu loop.

## ID Mode Screen

Press NEXT to display the ID Mode screen. Used primarily for troubleshooting, ID Mode displays the Sprite III version and current operating mode. The left and center digits display the unit version.

The right digit displays the current operating mode, as defined below:

.1 = Probeless Conveyer .2 = Probeless Door .3 = Probe Conveyer .4 = Probe Door


## Live Conductivity Display

The current conductivity reading is displayed, if enabled. This displays continuously and does not time out.

# User Mode Operation

## Password Access to Program Mode

1. Press and hold ENTER for 2 seconds to access the Password input screen. The factory-set password is 123.
2. Press SCROLL to change the blinking digit to the desired value.
3. Press NEXT to move the blinking digit.
4. Press ENTER to set all numbers and exit to Program Mode. An incorrect password entry returns you to the home screen.

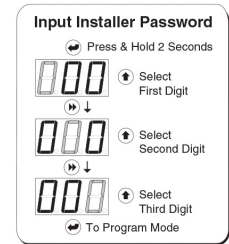

## Manual Initial Charge Function (Probeless Mode ONLY)

1. From the Home Screen, press SCROLL to activate manual initial charge.
2. Press SCROLL again to terminate manual initial charge early.

## Rinse Saver Feature

Rinse Saver is always operational and does not require additional programming. Rinse Saver prevents product waste when filling the tank and assures that rinse will only operate under the following conditions:

- The detergent signal has occurred within the previous 90 seconds.
- There is a rinse input signal on the board. On door-type dishwashers, Rinse will operate as long as the rinse signal is present but not longer than 20 seconds continuously.

## Display Indicators

In User Mode, information about the dispenser's operation is seen in the following displays, which may occur in combination with each other during normal operation:

- Idle Home Screen (Center Digit): Dash in center digit indicates that power is on.
- Detergent Feed On (Top Half of Left Digit): One segment continuously rotates clockwise.
- Rinse Pump On (Top Half of Center Digit): One segment continuously rotates clockwise.
- Third Product Feed On (Top Half of Right Digit): One segment continuously rotates clockwise.
- Alarms (alarms are audible ONLY IF the Alarm Volume is set to Lo, ME or Hi in the ALr menu):
  - Low Detergent Visual Alarm (Probe Mode Only): Bottom segments flash on all three digits and an audible alarm sounds. (See “Low Detergent Alarm (Probe Mode ONLY)” on page 16).
  - Detergent Overfeed Stop Alarm (Probe Mode Only): Left digit displays a zero; bottom segments of center and right digits flash and an audible alarm sounds. (See “Detergent Overfeed Stop Alarm (Probe Mode ONLY)” on page 17.)
  - Change Wash Tank Water Alarm (All Modes): Display flashes H20 and audible alarm beeps intermittently. (See “Change Tank Wash Water Alarm (Menu CtA)” on page 17.)

## Low Detergent Alarm (Probe Mode ONLY)

Activation of the Low Detergent Alarm will not interrupt the operation of the dish machine.

In conveyor machines, the low detergent alarm occurs only when the following conditions are met:

- A detergent signal occurs, AND
- The conductivity level falls below the programmed setpoint AND
- The detergent concentration does not increase when the detergent feeds within a preset number of racks washed, as programmed in Low Detergent Alarm Delay (LdA) of Program Mode.

In **door machines**, the low detergent alarm (audible and visual) occurs only when the following conditions are met:

- Conductivity is below the programmed setpoint, AND
- The number of programmed rack-count errors have been reached. (A rack-count error occurs each time there is a rinse signal that occurs within 5 minutes of the detergent signal.)

**Visual Alarm:** Flashing lower segments of all three digits

**Audible Alarm:** Beeps three times per rack (ONLY IF Alarm Volume is not set to off in the ALr menu)

### Reset Low Detergent Alarm

Conditions that will cause the alarm to reset are:

1. Conductivity rises by 10% (OR rises to the setpoint) within the number of racks set in “Low Detergent Alarm Delay” (LdA), OR
2. A key is pressed on the controller (pause), OR
3. Device power is cycled off and on (alarm will resume unless conductivity rises).

## Detergent Overfeed Stop Alarm (Probe Mode ONLY)

The detergent overfeed stop alarm occurs if a low detergent alarm condition continues for twice the preset number of racks washed (as programmed in the Low Detergent Alarm Delay Menu > AJ.P > LdA). At that point, the detergent feed stops and the audible and visual alarm changes to indicate the detergent overfeed stop.

**Visual Alarm:** Flashing left zero and flashing center and right lower lines

**Audible Alarm:** Sounds continually in bursts of three beeps (ONLY IF Alarm Volume is not set to oFF in the ALr menu)

To begin detergent feed after changing the product container, press any key to reset this alarm.

## Change Tank Wash Water Alarm

The change tank wash water alarm alerts the operator to drain the wash tank and refill it with fresh water. The alarm occurs after the number of racks set in “Change Tank Wash Water Alarm (Menu CtA)” have run. The alarm must be enabled; the default setting is OFF.

**Visual Alarm:** Flashing H2O

**Audible Alarm:** Sounds intermittent beeps in conjunction with flashing display (ONLY IF Alarm Volume is not set to oFF in the ALr menu)

To stop and reset the alarm, press any key after changing the wash water.

**NOTE:** Alarm racks are counted as individual racks (1-999), unlike the total Rack Count, which is counted in sets of 20 racks (20 racks equal 1 score).

# Program Mode Operation

## Overview

Program Mode consists of three circular, top-level menu loops. Menus are represented by an acronym that appears on the display. Programming selections appear as either acronyms or as numbers. Menus and default settings are illustrated in Figure 14 “*Program Mode Menus*” on page 19.

The Configuration Settings loop (CnF) is always available. There are two Adjustment Menu loops: Probe (AJ.P) or Probeless (AJ.n). To simplify programming, only one Adjustment Menu is accessible, as determined by Detergent Control (dct) selection of Probe or Probeless in the Configuration Setting.

**NOTE:** Alarm racks are counted as individual racks (1-999), unlike the total Rack Count, which is counted in sets of 20 racks (20 racks equal 1 score).

**IMPORTANT:** When programming the dispenser for a new installation, always set the Configuration Settings first.

After the Configuration has been set, program the dispenser adjustments (either Probe or Probeless) in the available Adjustment Menu loop. Subsequent maintenance adjustments will typically be made in the same Adjustment Menu loop.

## Password Access to Program Mode

You must input the correct password to enter Program Mode. Use the factory-default setting, as described below, or customize the password, as described in “*Edit Installer Password (Menu Pin)*” on page 22.

1. Input Installer Password as described in “Password Access to Program Mode” on page 16 or see “Configuration Settings (Menu CnF)” on page 20 for a graphic illustration of password input.
2. Press SCROLL to change the blinking menu from CnF (Configuration Settings), to AJ.P (Adjustments—Probe) or AJ.n (Adjustments—Probeless), or to out to exit Program Mode.
3. Press NEXT to move between the top-level main menu loops CnF, AJ.P and AJ.n.
4. Press ENTER to exit Program Mode when out (Exit Program Mode) displays. Program Mode is automatically exited after 5 minutes of inactivity.



# Program Mode Operation

## Program Mode Menus Diagram



Figure 14 Program Mode Menus

# Program Mode Operation

## Configuration Settings (Menu CnF)



Figure 15 Configuration Settings (Menu Loop CnF)

### Detergent Control (Menu dct)

This selection determines which adjustment menu is available for programming (probe or probeless).

1. Press ENTER to view/change this setting.
2. Press SCROLL to select between Prb (Probe) and noP (Probeless) detergent control.
3. Press ENTER to save the setting and return to the main menu loop.



# Program Mode Operation

## Machine Type (Menu Mt)

1. Press ENTER to view/change this setting.
2. Press SCROLL to select between dor (Door) and con (Conveyor) machine type.
3. Press ENTER to save the setting and return to the main menu loop.

## Detergent Type (Menu dt)

1. Press ENTER to view/change this setting.
2. Press SCROLL to select either Select LiP(liquid) or cAP (capsule) detergent type.  
Pulse feed times for liquid detergent are fixed at 3 seconds on / 3 seconds off at 80-100% of setpoint.  
Pulse feed times for capsule detergent are set in the next menu.
3. Press ENTER to save the setting and return to the main menu loop.

## Pulse Feed – Capsule Detergent in Probe Mode ONLY (Menu PuL)

**NOTE:** This menu displays only if menu dct (Detergent Control) is set to prb (Probe)

1. Press ENTER to view/change this setting.
2. Press SCROLL to change the value, then press ENTER to save the setting and return to the Configuration Settings Menu loop. The settings are as follows:  
195 = 1 Second on, 9 Seconds off, 50% of setpoint  
197 = 1 Second on, 9 Seconds off, 70% of setpoint  
265 = 2 Seconds on, 6 Seconds off, 50% of setpoint  
268 = 2 Seconds on, 6 Seconds off, 80% of setpoint (Default)  
447 = 4 Seconds on, 4 Seconds off, 70% of setpoint  
648 = 6 Seconds on, 4 Seconds off, 80% of setpoint  
619 = 6 Seconds on, 1 Second off, 90% of setpoint  
oFF = No pulse feed

## Alarm Volume (Menu ALr)

1. Press ENTER to view/change this setting.
2. Press SCROLL to select between oFF (Off), Lo(Low), ME (Medium), or H(High) alarm volume.  
A half-second beep will sound for each level as the SCROLL key is pressed.
3. Press ENTER to save the setting and return to the main menu loop.

## Rack Time in Rinse – Conveyor Machines ONLY (Menu rtr)

**NOTE:** Rack Time in rinse applies only to conveyor type dishwashers. It is used to count racks and to determine detergent dose intervals when in Probeless Mode.

To determine the number of seconds to input in this screen, time (and make note of) the number of seconds the dish machine conveyor takes to move one rack a single rack length's distance.

1. Press ENTER to view/change this setting. The range is 0-29 seconds. The default is 10 seconds.
2. Press SCROLL to change the value of the blinking center digit (tens), then press NEXT to move to the right digit (ones), which begins blinking.
3. Press SCROLL to change the value of the blinking right digit.
4. Press ENTER to save the setting and return to the main menu loop.

## Rack Counter Reset (rCr)

The Rack Counter counts racks by scores (sets of 20 racks). Every 20,000 racks, a decimal lights up, the rack counter rolls from 999 to zero and begins counting the next 20,000 racks. The maximum of 80,000 racks displays as 999 and all decimals lit. No additional racks are counted until the rack count is reset to zero.

1. With rCr displayed, press ENTER to view the current rack count.
2. With the current rack count displayed, press SCROLL to change the display to CLr (Clear).
3. With CLr displayed, press ENTER to clear the rack count. 000 displays as the new rack count. (To exit without clearing the rack count, press SCROLL to return to the current rack count.)
4. Press ENTER to return to the main menu loop.

## Automatic Initial Charge - Probeless Only (Menu Aic)

**NOTE:** This setting only applies to probeless detergent control when selected in menu dct. It determines whether the Initial Charge is Automatic (on) or Manual (oFF).

In **Manual Initial Charge** (Aic is oFF), the user presses SCROLL to start an Initial Charge.

An **Automatic Initial Charge** in a **door-type dishwasher** (Aic is on), occurs each time the dispenser receives a rinse signal that was not preceded by a detergent signal within the prior 90 seconds (i.e. on an initial fill). Then, after a 1 second signal qualification, the dispenser detects an Automatic Initial Charge and disabling the rinse feed and feeding detergent for the time set in menu dic (Detergent Initial Charge). Normal rinse signal activations (within 90 seconds after a detergent signal) do not generate an initial charge. A five minute lockout timer begins at the start of the initial charge; this prevents an additional initial charge from occurring if multiple rinse signals are detected during fill.

An **Automatic Initial Charge** in a **conveyor-type dishwasher** (Aic is on), occurs each time the dispenser detects a detergent signal input (three second filter) that remains on for 10 seconds continuously. Then, the rinse pump turns off for 90 seconds (or Detergent Initial Charge time, if longer), and the detergent feeds for the time set in “*Detergent Initial Charge (Menu dic)*” on page 27. This will happen each time a detergent signal occurs, so the source of this signal must remain on for entire time the tank is full, or must not occur more than once per machine fill. (See Chapter 2 “*Electrical Installation*” for more information.)

### To enable or disable the Automatic Initial Charge:

1. Press ENTER to view/change this setting.
2. Press SCROLL to select between on (Automatic) and oFF (Manual) initial detergent charge.
3. Press ENTER to save the setting and return to the main menu loop.

## Edit Installer Password (Menu Pin)

**CAUTION:** Be sure to note the new password if you change it from the factory setting (123). If your password is lost, contact Technical Support.

1. Press ENTER to change to change the password to any three-digit number.
2. Press SCROLL to change the blinking digit to the desired value, then press NEXT to move the blinking digit. Repeat to set the value for all digits.
3. Press ENTER to save the new password and return to the main menu loop.

# Program Mode Operation

## Change Tank Wash Water Alarm (Menu CtA)

Set the number of racks (1-999) allowed to run before the visible & audible alarm is activated, or leave at the factory default setting of 0 (Alarm Off). This alarm only sounds if the Alarm Volume is not set to OFF in the ALr configuration menu. Racks are counted individually for the Change Tank Water Alarm, not by scores as they are in the Rack Counter.

1. Press ENTER to view/change this setting.
2. Press SCROLL to change the blinking digit to the desired value then press NEXT to move the blinking digit. Repeat for all three digits.
3. Press ENTER when the desired count displays. This saves the setting and returns to the main menu loop.

## Third Product Pump Selection (Menu 3rd)

1. Press ENTER to view whether the 3rd product is set to run with the rinse or detergent pump.
2. Press SCROLL to select either rin (Rinse) or dEt (Detergent), then press ENTER to save the setting.

## Adjustments – Probe Mode (Menu AJ.P)

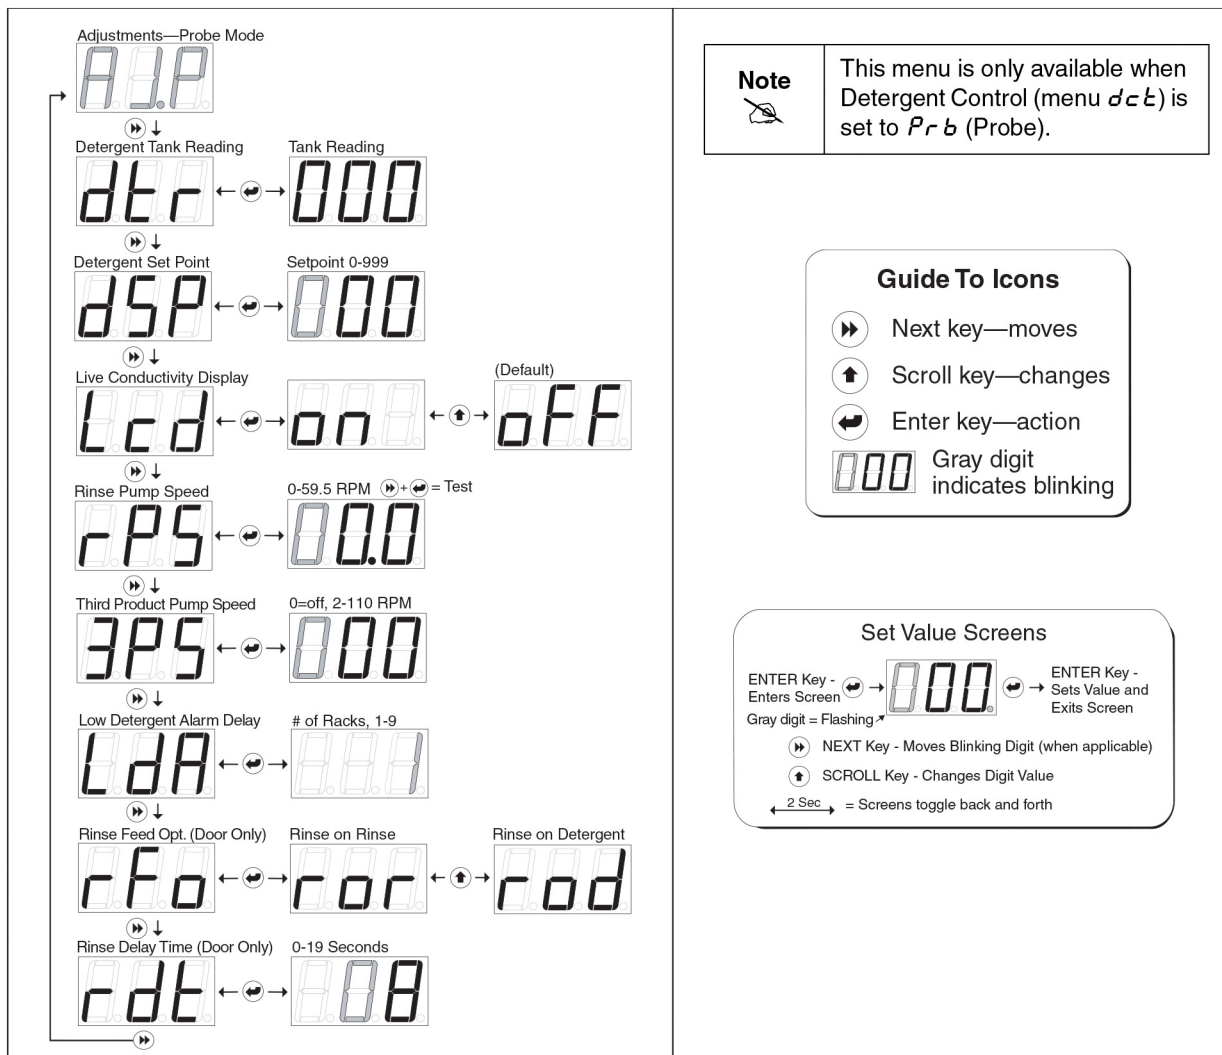


Figure 16 Adjustments - Probe Mode (Menu Loop AJ.P)

## Detergent Tank Reading (Menu dtr)

**NOTE:** Prepare for this reading by manually adding product to proper concentration, then test via titration or measured volume. The dishwasher tank solution must be well mixed (wash pump running) and at operating temperature.

1. Press ENTER to view this number, which is an average that is updated every 0.1 seconds.
2. Make note of the tank reading displayed. This is your setpoint.

## Manual Operation of Detergent Output (Menu dtr)

This enables the user to manually add more product in order to achieve the desired titration level.

1. Press SCROLL to run detergent output. Product is added for the length of time SCROLL is pressed.
2. When the proper concentration is reached (determined through reliable means), press ENTER for a minimum of two seconds. This adjusts the setpoint to the present filtered tank reading and displays menu dSP.
3. Press ENTER (hold for two seconds) to confirm new setpoint. If ENTER is pressed for less than two seconds, the display returns to menu dtr and no setting is stored in menu dSP.

## Detergent SetPoint (Menu dSP)

**NOTE:** Setpoint is most accurate when used with the new Hydro Systems probe that is provided.

Input the number noted in *Detergent Tank Reading (Menu dtr)*, above.

1. Press ENTER to view/change this setting.
2. Press SCROLL to change the blinking digit to the desired value then press NEXT to move the blinking digit. Repeat for all three digits. The range of this adjustment is 0-999.
3. Press ENTER to save the setting and return to the main menu loop.

**NOTE:** It is a good practice to run a few racks through the dish machine and retest concentration with a titration kit. If the concentration is not at the desired level, adjust accordingly.

## Enable User Live Conductivity Display (Menu Lcd)

1. Press ENTER to view/change this setting.
2. Press SCROLL to select on (enable User Live Conductivity Display) or oFF (disable this display). The default is oFF.
3. Press ENTER to save the setting and return to the main menu loop.

## Rinse Pump Speed (Menu rPS)

**NOTE:** Adjust the rinse pump speed for appropriate amount of product needed to produce good results on wares.

To determine this adjustment, note the amount of rinse product per unit of water (check the dish machine specifications for rinse water flow rate per minute), or observe the sheeting action of the product on wares. With the standard rise pump tube, the Sprite III will dispense 0.5 ml per revolution.

To test run or view the rinse pump speed, press and hold NEXT, followed by ENTER. The pump will run at the current speed setting.

To change the rinse pump speed:

1. Press ENTER to view/change this setting.
2. Press SCROLL to change the blinking digit to the desired value, then press NEXT to move the blinking digit. Repeat for all digits. The range is 0-59.5 RPM, in 0.5 RPM steps.
3. Press ENTER to save the setting and return to the main menu loop.

## Third Product Pump Speed (Menu 3PS)

**NOTE:** To disable the Third Product Pump, set the motor speed to zero.

Adjust the Third Product speed so that the proper amount of third product is dispensed during the Rinse On or Detergent On time (depending on mode selected in Menu 3rd). The Third Product Pump will dispense 6 oz. per minute at its maximum speed. The speed is adjustable from 2-110 RPM in steps of 1 RPM. A setting of 0 means that Third Product Pump is off.

To test run or view the third product pump speed, press and hold NEXT followed by ENTER. The pump will run at the current speed setting.

### To set the Third Product Pump speed:

1. Press ENTER to view/change this setting.
2. Press SCROLL to change the blinking digit to the desired value.
3. Press NEXT to move the blinking digit. Repeat for all digits.
4. Press ENTER to save the setting and return to the main menu loop.

## Low Detergent Alarm Delay (Menu LdA)

This setting determines how many racks can run before the Low Detergent Alarm is activated. This alarm only sounds if the Alarm Volume is not set to OFF in the ALr configuration menu.

1. Press ENTER to view/change this setting.
2. Press SCROLL to select the number of racks (1-9) allowed to run with a low detergent concentration.
3. Press ENTER to save the setting and return to the main menu loop.

**NOTE:** The low detergent alarm will only occur only if there is no increase in detergent concentration and the unit is below setpoint for the number of racks set. The low detergent alarm resets itself when it detects a rise in detergent concentration.

## Rinse Feed Option (Menu rFo)

This setting determines when the rinse feed is activated.

1. Press ENTER to view/change this setting.
2. Press SCROLL to select ror (rinse on rinse) to run the rinse pump each time the rinse signal activates (for the duration of time the signal is present). Select rod (rinse on detergent) to run the rinse pump for a fixed time of 12 seconds each time the detergent signal activates.
3. Press ENTER to save the setting and return to the main menu loop.

## Rinse Delay Time (Menu rdt)

**NOTE:** This menu is only available when the Machine Type is dor (Door) and rFo (Rinse Feed Option) is set to ror (Rinse On Rinse).

Minimizes rinse product waste by injecting product only during the last few seconds of each rack.

1. Press ENTER to view/change this setting.
2. Press SCROLL to change the blinking digit to the desired time in seconds, then press NEXT to move the blinking digit. Repeat for both digits. The range is 0-19 seconds.
3. Press ENTER to save the setting and return to the main menu loop.

# Program Mode Operation

## Adjustments—Probeless Mode (Menu AJ.n)

**NOTE:** This menu loop is only available when Detergent Control (menu dct) is set to noP (Probeless).

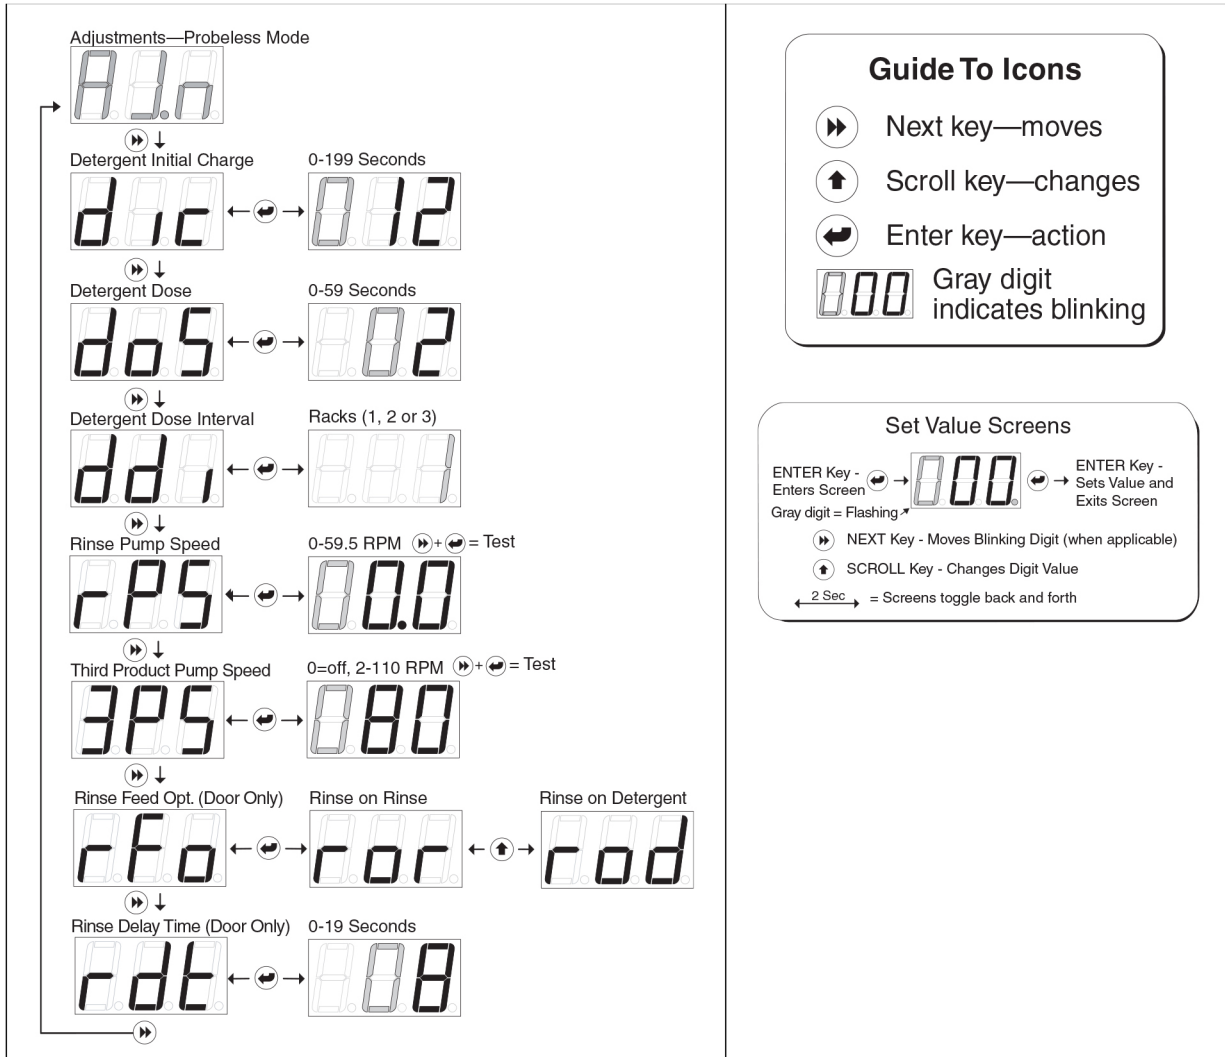


Figure 17 Adjustments - Probeless Mode (Menu Loop AJ.n)



## Detergent Initial Charge (Menu dċ)

**NOTE:** Prepare for this reading by determining the detergent feed time (in seconds) required to charge the wash tank to the correct concentration on an initial fill.

1. Press ENTER to change this setting. Input the initial charge detergent feed time.
2. Press SCROLL to change the blinking digit to the desired value, then press NEXT to move the blinking digit. Repeat for all three digits. The range is 0-199 seconds. The default is 12 seconds.
3. Press ENTER to save the setting and return to the main menu loop.

## Detergent Dose (Menu doS)

**NOTE:** The amount of detergent dose time required depends on the detergent dose interval you will set in the next step. The available dose intervals are: Every rack, every second rack, or every third rack.

1. Press ENTER change this setting. Input the detergent pump run time required.
2. Press SCROLL to change the blinking digit to the desired value, then press NEXT to move the blinking digit. Repeat for all three digits. The range is 0-59 seconds. The default is 2 seconds.
3. Press ENTER to save the setting and return to the main menu loop.

## Detergent Dose Interval (Menu dd)

1. Press ENTER to view/change this setting.
2. Press SCROLL to select whether the detergent dose occurs every rack (1), every other rack (2) or every third rack (3). A detergent dose occurs each time the accumulated number of racks is reached.
3. Press ENTER to save the setting and return to the main menu loop.

## Rinse Pump Speed (Menu rPS)

**NOTE:** Adjust rinse pump speed for the appropriate amount of product needed to produce good results.

To determine this adjustment, note the amount of rinse product per unit of water (check the dish machine specifications for rinse water flow rate per minute), or observe the sheeting action of the product on wares. With the standard size rinse pump tube, the Sprite III will dispense 0.5 ml per revolution.

To test run or view/edit the rinse pump speed:

1. Press and hold NEXT, followed by ENTER, and the pump will run at the current speed setting.
2. Press ENTER to view/change this setting.
3. Press SCROLL to change the blinking digit to the desired value, then press NEXT to move the blinking digit. Repeat for all digits. The range is 0-59.5 RPM, in 0.5 RPM steps.
4. Press ENTER to save the setting and return to the main menu loop.

## Third Product Pump Speed (Menu 3PS)

**NOTE:** To disable the third product pump, set the motor speed to zero.

Adjust the third product speed so that the proper amount of third product is dispensed during the Rinse On or Detergent On time (depending on the mode selected in Menu 29). The third product pump will dispense 6 oz. per minute at its maximum speed. The speed is adjustable from 2-110 RPM in steps of 1 RPM. A setting of 0 means that this pump is off.

To test run or view the third product pump speed, press and hold NEXT followed by ENTER; the pump will run at the current speed setting.

To set the pump speed:

1. Press ENTER to change this setting.
2. Press SCROLL to change the blinking digit to the desired value.
3. Press NEXT to move the blinking digit. Repeat for all digits.
4. Press ENTER to save the setting and return to the main menu loop.

## Rinse Feed Option (Menu rFo)

1. Press ENTER to view/change this setting.
2. Press SCROLL to select rinse feed option (ror or rod). Either option will run both the rinse feed and the detergent dose at the intervals noted in "Detergent Dose Interval (Menu ddi)" on page 27.
  - Select ror to run rinse pump each time the rinse signal activates (for the duration of time the signal is present).
  - Select rod to run the rinse pump for a fixed time of 12 seconds each time detergent signal activates.
3. Press ENTER to save the setting and return to the main menu loop.

## Detergent Dose Interval (Menu dd)

1. Press ENTER to view/change this setting.
2. Press SCROLL to select whether the detergent dose occurs every rack (1), every other rack (2) or every third rack (3). A detergent dose occurs each time the accumulated number of racks is reached.
3. Press ENTER to save the setting and return to the main menu loop.

## Rinse Delay Time (Menu rdt)

Minimizes rinse product waste by injecting product only during the last few seconds of each rack.

**NOTE:** This menu option is only available when the Machine Type dor (Door) is selected and rFo (Rinse Feed Option) is set to ror (Rinse on Rinse).


1. Press ENTER to view/change this setting.
2. Press SCROLL to change the blinking digit to the desired time in seconds.
3. Press NEXT to move the blinking digit. Repeat for both digits. The range of this adjustment is from 0 to 19 seconds.
4. Press ENTER to save the setting and return to the main menu loop.




# Troubleshooting

## Alarms and Indicators


The following alarms and display indicators can be seen when in the User Mode Home Screen. They provide useful information for troubleshooting purposes.

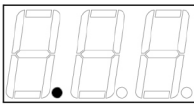


Detergent Signal On

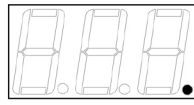


Rinse Signal On

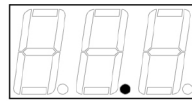


Probe Mode Active

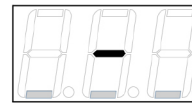


Low Detergent Alarm

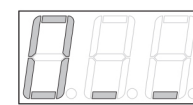


Detergent Overfeed Stop Alarm

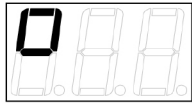


Detergent Pump Jammed

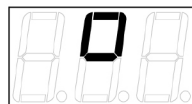

Rinse Pump Jammed

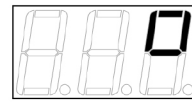

Third Product Pump Jammed

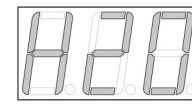

Change Tank Water Alarm

## Alarm Reset

The low detergent alarm resets itself when the dispenser senses an increase in the detergent concentration in the wash tank.

The Detergent Overfeed Stop Alarm can be reset (e.g., to initiate detergent feed after changing the product container) by pressing any key.

## Power Supply Input and Output

Refer to the images below when using the “Problems and Solutions List” on page 30.

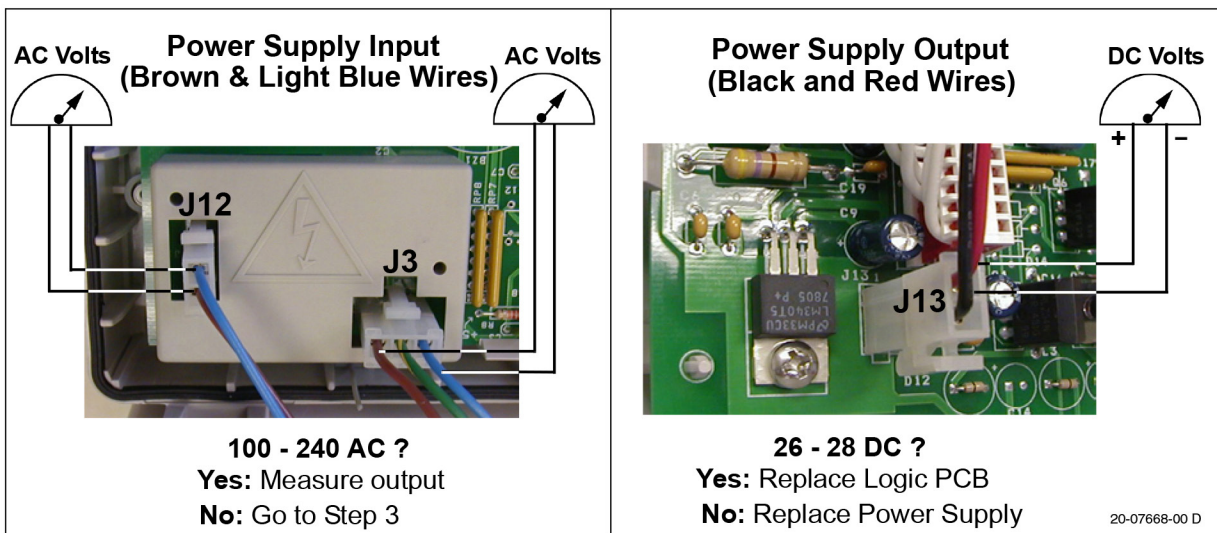


Figure 18 AC and DC Readings

# Troubleshooting

## Problems and Solutions List

Problem	Possible Cause	Solution
No voltage to main power terminals.	<ol style="list-style-type: none"> <li>1. Tripped breakers or blown fuses at power source.</li> <li>2. Main power wires.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reset breakers or replace fuse at power source.</li> <li>2. Check connections at plug or washer power terminals.</li> </ol>
There is power at the main power terminals, but: NO power to Logic PCB at J3 (3-input connector) outside pins.	Blown fuses on the power supply board.	Replace the power supply assembly (board and power supply)
There is power at the main power terminals and at J3, but: NO power at J12.	<ol style="list-style-type: none"> <li>1. Power switch may be off.</li> <li>2. Bad power switch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn power switch on.</li> <li>2. Replace Logic PCB.</li> </ol>
There is AC power at main power terminals, and at J3 and at J12, but: NO DC power at J13 (24VDC).	Bad power supply.	Replace power supply module.
The correct voltages are present at all four locations (main power terminals, J3, J12 and J13) but: there is NO LED display.	Damaged logic board.	Replace the logic PCB.
Password will not access Program Mode.	<ol style="list-style-type: none"> <li>1. Password has been changed.</li> </ol>	Call Hydro Systems technical service.
Pump runs slowly.	<ol style="list-style-type: none"> <li>1. Pump not properly plugged in.</li> <li>2. Pump failure.</li> </ol>	<ol style="list-style-type: none"> <li>1. Verify pump electrical connectors are properly plugged in.</li> <li>2. Replace failed pump.</li> </ol>
Pump runs but will not deliver product, producing poor results.	<ol style="list-style-type: none"> <li>1. Squeeze tube failure.</li> <li>2. Product tubing plugged.</li> <li>3. Pump roller failure.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace squeeze tube.</li> <li>2. Replace product tubing.</li> <li>3. Replace spinner assembly.</li> </ol>
Pump does not run—Pump Jam displays.	<ol style="list-style-type: none"> <li>1. Broken spinner (a.k.a. roller).</li> <li>2. Pump motor has power but will not move (frozen).</li> <li>3. Pump motor starts at full speed, and then stalls.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace spinner assembly.</li> <li>2. Replace pump motor.</li> <li>3. Replace pump motor.</li> </ol>
Rinse Product not dispensed. NOTE: The Rinse Saver feature will prevent rinse from being dispensed unless: (1) There is a rinse input signal to the board and (2) A detergent signal has occurred within the previous 90 seconds. See “Rinse Saver Feature” on page 5-3 for a more detailed explanation.	<ol style="list-style-type: none"> <li>1. No power to rinse signal—wires loose or incorrectly wired. (Signal has power when decimal point displays, even if pressure switch controlled.)</li> <li>2. Refer to “Pump runs, will not deliver product...poor results.”</li> <li>3. Verify time set for Rinse Delay (can delay rinse product being dispensed for up to 19 seconds).</li> <li>4. Rinse Saver Feature operating.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and correct rinse signal wiring to washer (see “Rinse Signal Wiring” on page 11).</li> <li>2. Replace squeeze tube, product tubing or pump roller (spinner) if needed.</li> <li>3. Reset Rinse Delay Time.</li> <li>4. Must have both: 1) a rinse signal input to the board and 2) a detergent signal within the previous 90 seconds.</li> </ol>

## Overview

This chapter describes maintenance needed by the Sprite III and includes a list of spare parts:

- Routine Maintenance
- Maintenance Visits
- Pump Tube Replacement
- Spare Parts List

## Routine Maintenance

Routine maintenance on the Sprite III unit includes:

- Keeping the probe clean (probe mode operation only).
- Keeping pump tubes fresh.
- Keeping the unit clean.

## Every Maintenance Visit

Each maintenance visit should include the following steps:

- Titrate the wash tank solution to verify that unit is holding accurate concentration.
- Clean probe, if required.
- Clean the unit cabinet with a damp cloth.
- Check the pump tube's condition and replace if needed.


## Pump Tube Replacement

Replace pump tubes at regular maintenance intervals, well before the tube fails and ruptures. In the event that the tube does rupture, clean all product from the pump with a damp cloth.

- Loosen the pump front captive screw and remove the pump front.
- Remove the old tube with barbed connectors and compression nuts.
- Install the new tube with barbed connectors and compression nuts oriented with flat sides facing towards the front.
- Insert new tube from the left side of the pump, with pump spinner oriented in an 11/1 o'clock position.
- Turn the spinner clockwise using a screwdriver as you press the pump tube in place.


## Spare Parts Reference

1a. Power Supply Module Only

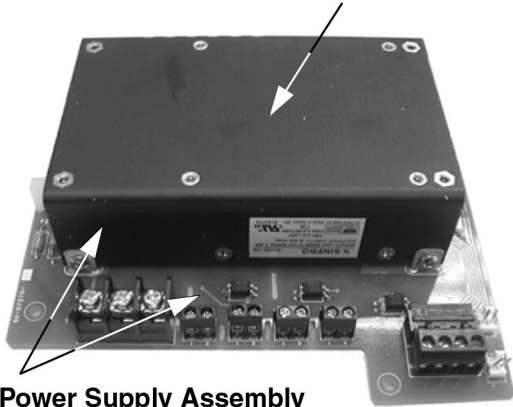

1b. Power Supply Assembly  
(includes module, PCB, harness)

2

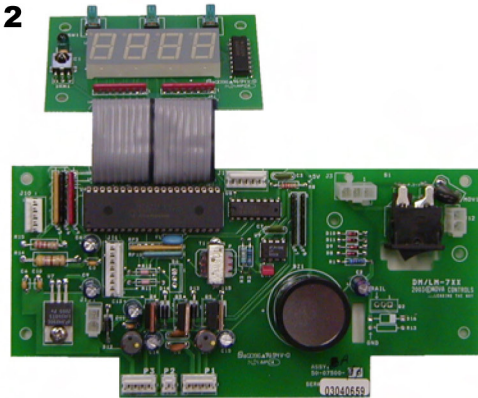

3



4



5



6

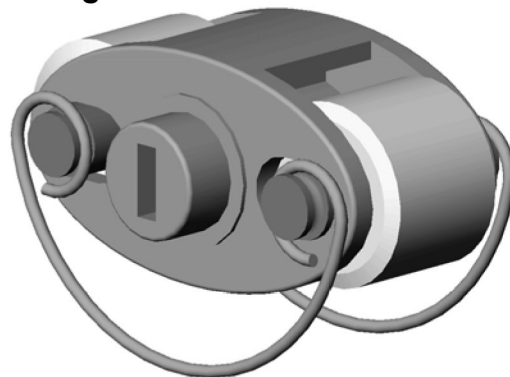


Figure 19 Spare Parts

# Maintenance and Service

## Spare Parts List

Ref. Number	Part Number	Description
1a	13-07724-00	Power Supply Module Only
1b	13-07724-01	Power Supply Assembly (includes module, PCB and Harness)
2	13-07725-10	Logic Circuit Board
*	13-07725-01	Logic Circuit Board w/ External Alarm Option
3	13-06524-01	Pump Motor Detergent w/2-Pin Plug
4	13-06523-01	Pump Motor Rinse w/5-Pin Plug
5	13-06398-00	Pump Front, RED, w/Captive Screw
5	13-06398-04	Pump Front, BLUE, w/Captive Screw
5	13-06398-05	Pump Front, ORANGE, w/Captive Screw
5	13-06398-11	Pump Front, SMOKE, w/Captive Screw
6	13-06396-00	Pump Spinner Assembly (all pumps)
*	37-07584-02	Cabinet Front, LIGHT GRAY
*	37-07584-05	Cabinet Front, BLACK
*	37-07585-32	Cabinet Rear, LIGHT GRAY
*	37-07585-05	Cabinet Rear, BLACK
*	13-07268-06	Power Switch Cover
*	13-07122-00	Dispenser Mounting Bracket Kit
*	13-07191-00	Solenoid Valve Kit, 1/4" Fitting
*	13-07191-02	Solenoid Valve Kit, 5/16" Fitting
*	13-06528-00	Solenoid Valve Nut w/Sleeve, 1/4" 10 pk.
*	13-06528-02	Solenoid Valve Nut w/Sleeve, 5/16" (8 mm) 10 pk.
*	13-06395-10	Pump Tube, Rinse / Sanitizer Lo-Flow, EPDM (incl. 1/4" Fittings, w/o Nuts) 10 pk.
*	13-06395-20	Pump Tube, Rinse / Sanitizer Lo-Flow, EPDM (incl. 1/4" and 1/8" Fittings, w/o Nuts) 10 pk.
*	13-06395-30	Pump Tube, Rinse / Sanitizer Lo-Flow, EPDM (incl. 1/8" Fittings, w/o Nuts) 10 pk.
*	13-06928-10	Pump Tube, Rinse / Sanitizer Lo-Flow, Silicone (incl. 1/4" Fittings, w/o Nuts) 10 pk.
*	13-06928-20	Pump Tube, Rinse / Sanitizer Lo-Flow, Silicone (incl. 1/4" and 1/8" Fittings, w/o Nuts) 10 pk.
*	13-06928-30	Pump Tube, Rinse / Sanitizer Lo-Flow, Silicone (incl. 1/8" Fittings, w/o Nuts) 10 pk.
*	13-06399-10	Pump Tube, Detergent / Sanitizer, EPDM (incl. 1/4" Fittings, w/o Nuts) 10 pk.
*	13-06563-00	Pump Tube Compression Nut w/Sleeve, 1/4", 10 pk.
*	13-06563-02	Pump Tube Compression Nut and Ferrule, 1/8" (3 mm) 10 pk.
*	13-06529-00	Rinse Injection Fitting, Straight, Kynar, 1/8" NPT x 1/4" Tube
*	13-06529-01	Rinse Injection Fitting, Straight, Kynar, 1/8" NPT x 1/8" (3 mm) Tube
*	13-06531-00	Rinse Injection Fitting, 90°, Elbow, 1/8" NPT x 1/4" Tube
*	13-06531-01	Rinse Injection Fitting, 90°, Elbow, 1/8" NPT x 1/8" (3 mm) Tube

\* Denotes items not shown.

# Specifications and Warranty

## Specifications

### Dimensions

Size	8" W x 9" H x 6" D (20.3 cm W x 22.2 cm H x 15.4 cm D)
Weight	6 lbs. (2.72 kg)

### Power Requirements

Total Amperage draw during operation	100 to 240 VAC nominal (+/- 10% fluctuation), 50/60 Hz. 1.0 amps (max.)
--------------------------------------	---

### General

Rinse Pump Flow Rate	0.5 mls/revolution
Detergent Pump Flow Rate	6 oz./min. (178 mls/min)
Third Product Pump Flow Rate	0.10 oz./min. to 6 oz./min. (3 mls/min. to 178 mls/min.)

### Environmental

Pollution	2
Installation Category	II
Temperature	10° to 40° C (50° to 120° F) (max.)
Humidity	95% relative humidity (max.)
Indoor Installation	Approved for indoor use only. Must not be installed outdoors.
Altitude	Install at or below 6,500 ft. (2000 m) max.

**NOTE:** Specifications subject to change without notice.

### Limited Warranty

**Seller** warrants solely to **Buyer** the Products will be free from defects in material and workmanship under normal use and service for a period of one year from the date of completion of manufacture. This limited warranty does not apply to (a) hoses; (b) and products that have a normal life shorter than one year; or (c) failure in performance or damage caused by chemicals, abrasive materials, corrosion, lightning, improper voltage supply, physical abuse, mishandling or misapplication. In the event the Products are altered or repaired by **Buyer** without **Seller's** prior written approval, all warranties will be void. **No other warranty, oral, express or implied, including any warranty of merchantability or fitness for any particular purpose, is made for these products, and all other warranties are hereby expressly excluded.**

**Seller's** sole obligation under this warranty will be, at **Seller's** option, to repair or replace F.O.B. **Seller's** facility in Cincinnati, Ohio any Products found to be other than as warranted.

### Limitation of Liability

Seller's warranty obligations and Buyer's remedies are solely and exclusively as stated herein. Seller shall have no other liability, direct or indirect, of any kind, including liability for special, incidental, or consequential damages or for any other claims for damage or loss resulting from any cause whatsoever, whether based on negligence, strict liability, breach of contract or breach of warranty.



# Index

## Numerics

100-240 VAC .....	10
120/208 VAC .....	10
120/240 VAC .....	10
220/380 VAC or 240/415 VAC .....	10-11
3-Phase Power Installation Requirements.....	10

## A

Adjustments - Probe Mode .....	23
Adjustments - Probeless Mode .....	26
Alarm Reset .....	29
Alarm Volume .....	16, 21, 23, 25
Alarms .....	4, 29

## B

Breakers, tripped .....	30
Broken Spinner.....	30
Bulkhead Fitting .....	7

## C

Change Tank Wash Water Alarm .....	17
Changing numbers on the display .....	12
Clear Rack Count .....	22

## D

Decimal is Lit .....	15
De-lime .....	15
De-stainer pump.....	9
Detergent	
alarms.....	16, 17, 25, 29
concentration .....	6, 7, 16, 25
dose .....	21, 27, 28
probeless control .....	22
setpoint .....	15, 16, 21, 24
type .....	21
Dimensions.....	34

## E

Electrical	
cautions.....	10
connections.....	9, 10
Enable User Live Conductivity Display... ..	24
Enter Key .....	12

## F

Fuse, blown .....	30
-------------------	----

## I

Initial Charge.....	11, 14, 16, 22, 27
probeless.....	16
Input Screen .....	12, 16

## K

Key Description .....	12
-----------------------	----

## L

Limitation of Liability .....	34
Liquid Detergent .....	21

## M

Machine Type .....	21, 25, 28
Main Power Wiring	
3-Phase Power.....	10
Single-Phase Power.....	10
Maintenance.....	31-33
Manual Initial Charge.....	16, 22
Motor .....	9, 11, 25, 28, 30, 33
replacement part .....	33
Mounting Bracket.....	6

## N

Next Key .....	12
No Voltage to Main Power.....	30
Normal Operation Displays .....	16

## O

Overfeed .....	17, 29
Overfeed Stop Alarm	
reset .....	29

## P

Password.....	12, 13, 16, 18, 22, 30
input screen.....	12, 16
will not work .....	30
Power Requirements .....	34

Power Supply .....	29, 30, 33
input and output.....	29
Prime .....	4, 12, 13, 15
Probe .....	6-7, 13, 31
Probe Wiring.....	9
Probe, Adjustments Menu.....	9, 13, 20
Probe, Maintenance .....	18, 31
Probe, Rack Counter.....	15
Probeless, Adjustments Menu... ..	9, 13, 18, 20
Program Mode .....	12, 16-28
Pump	
jam.....	30
motor is frozen .....	30
motor starts and stalls .....	30
motor, rinse replacement part .....	33
no product delivery .....	30
rinse speed.....	24
roller .....	30
runs slowly or does not run.....	30
speed .....	9, 13, 24, 25, 27, 28
third product speed.....	13, 25, 28
tube replacement .....	31

## R

Rack Count.....	15, 17, 18
alarm vs. rack counter.....	30
decimal is lit .....	30
Reset Alarms .....	16, 17, 29
Results, poor .....	30

## Rinse

feed .....	13, 25, 28
prime .....	14
product not dispensed.....	30
signal .....	11, 14-16, 22, 25
Rinse Delay.....	4, 13, 25, 28, 30
Rinse Injection.....	7-9, 33
Rinse Pump....	8, 12, 16, 22, 24, 25, 27, 28
specs.....	34
Rinse Saver .....	4, 16, 30

## S

Sanitizer.....	9, 33
Scroll Key .....	12, 21
Signal Wiring .....	11
Single-Phase Power Systems .....	10
Solenoid Water Feed .....	8
Spare Parts.....	32
Squeeze Tube.....	30

## T

Tank Alarm	
set .....	30
Third Product Pump .....	9, 13, 23, 25, 28
Troubleshooting.....	29-30
guide .....	30
Tube Connection .....	8

## U

User Mode.....	12, 14-16
----------------	-----------

## V

Voltage.....	4, 9-11, 30
--------------	-------------

## W

Wall Mount .....	6
Warranty .....	34
Wash Water Alarm.....	16, 17, 23
set .....	30
Water Resistance of Unit.....	9
Wiring .....	6, 9-11
cables.....	10
locations.....	11

## Z

Zero Out Rack Counter .....	22
-----------------------------	----



### Configuration Settings

Input Password to Start  
**cnf**

Detergent Control: **dct** ← Probe: **Prb** ← Probeless: **noP**

Machine Type: **PTT** ← Door: **dor** ← Conveyor: **con**

Detergent Type: **dte** ← Liquid: **L19** ← Capsule: **cAP**

Pulse Feed\* (Capsule): **PuL** ← **OFF** 195 197 265  
268 447 648 619

Alarm Volume: **ALr** ← Off: **OFF** Low: **Lo** Medium: **ME** High: **Hi**

\* NOTE: Pulse Feed display is ONLY available when Detergent Type = Capsule (Menu d t = cAP)  
195 = 1 Second On, 9 Seconds Off, 50% of Set Point  
197 = 1 Second On, 9 Seconds Off, 70% of Set Point  
265 = 2 Seconds On, 6 Seconds Off, 50% of Set Point  
268 = 2 Seconds On, 6 Seconds Off, 80% of Set Point (Default)  
447 = 4 Seconds On, 4 Seconds Off, 70% of Set Point  
648 = 6 Seconds On, 4 Seconds Off, 80% of Set Point  
619 = 6 Seconds On, 1 Second Off, 90% of Set Point

### Configuration Settings con't.

Rack Time in Rinse: **rTr** ← Seconds For 1 Rack (0-29 secs.): **110** (Conveyor)

Rack Count Reset: **rCr** ← Current Rack Count: **988** ← Press **CLR** to Clear Rack Count


Initial Charge (Probeless): **Aic** ← Automatic: **on** ← Manual: **OFF**

Edit Password: **Pin** ← New Password: **223**

Change Tank Alarm: **CTA** ← # of Racks (000-999): **000** 000 = Off (default)

Third Product Runs: **3rd** ← With Rinse: **r in** ← With Detergent: **dEt**

20-09070-00 Rev. B **Quick Reference Card**



**NOVA CONTROLS**  
A Hydro Systems Company  
WATSONVILLE, CALIFORNIA USA 95076

**Sprite III (Alpha) Warewash**



