



IMPORTANT NOTICE

Do to a design change of the ECLIPSE Pump Interface Printed Circuit Board (PI PCB), the included adapter wiring harness must be used with this replacement PI PCB on early production ECLIPSE units.


Refer to the pictures below to identify if you have an early or late design PI PCB.

Install the adapter harness, at the location shown in the picture of the early design PI PCB, between the motor plug on the PI PCB and the motor harness that goes to the motors in the right side pump module.

New Style PI PCB (late design) (Do Not Use Adapter Harness)



Old Style PI PCB (early design) (Use Adapter Harness)

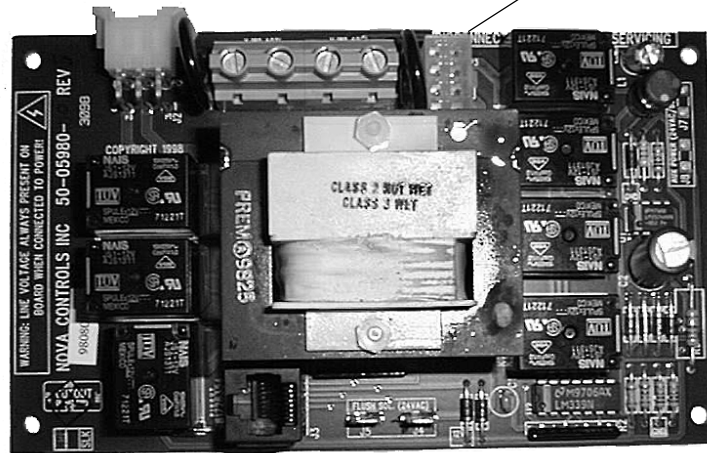

Install Adapter Harness Here

225 WESTRIDGE DRIVE
WATSONVILLE, CALIFORNIA
95076-4168 U.S.A.
N. AMERICA 800.252.6682
WORLDWIDE 1.831.786.1470
FAX 1.831.786.1650

<http://www.novacontrols.com>